

DVP04PT-E2

DVP06PT-E2

Instruction Sheet

安 裝 說 明

Temperature Measurement Module

溫度量測模組

温度量测模块

Thank you for choosing Delta's DVP series PLC. DVP04/06PT-E2 temperature measurement module receives 4/6 points of thermal resistance temperature sensors and converts them into 16-bit digital signals. Users can select the temperature to be displayed in Celsius (°C) or Fahrenheit (°F). Resolution of temperature in Celsius: 0.1°C and in Fahrenheit: 0.18°F. In addition, you can access the data in the module by applying FROM/TO instructions or read the average value of channels directly by using MOV instruction (Please refer to allocation of special registers D9900 ~ D9999).


EN ✓ DVP04/06PT-E2 is an OPEN-TYPE device. It should be installed in a control cabinet free of airborne dust, humidity, electric shock and vibration. To prevent non-maintenance staff from operating DVP04/06PT-E2, or to prevent an accident from damaging DVP04/06PT-E2, the control cabinet in which DVP04/06PT-E2 is installed should be equipped with a safeguard. For example, the control cabinet in which DVP04/06PT-E2 is installed can be unlocked with a special tool or key.

EN ✓ DO NOT connect AC power to any of I/O terminals, otherwise serious damage may occur. Please check all wiring again before DVP04/06PT-E2 is powered up. After DVP04/06PT-E2 is disconnected, Do NOT touch any terminals in a minute. Make sure that the ground terminal  on DVP04/06PT-E2 is correctly grounded in order to prevent electromagnetic interference.


FR ✓ DVP04/06PT-E2 est un module OUVERT. Il doit être installé que dans une enceinte protectrice (boîtier, armoire, etc.) saine, dépourvue de poussière, d'humidité, de vibrations et hors d'atteinte des chocs électriques. La protection doit éviter que les personnes non habilitées à la maintenance puissent accéder à l'appareil (par exemple, une clé ou un outil doivent être nécessaire pour ouvrir la protection).

FR ✓ Ne pas appliquer la tension secteur sur les bornes d'entrées/Sorties, ou l'appareil DVP04/06PT-E2 pourra être endommagé. Merci de vérifier encore une fois le câblage avant la mise sous tension du DVP04/06PT-E2. Lors de la déconnection de l'appareil, ne pas toucher les connecteurs dans la minute suivante. Vérifier que la terre est bien reliée au connecteur de terre  afin d'éviter toute interférence électromagnétique.

■ Product Profile & Dimension

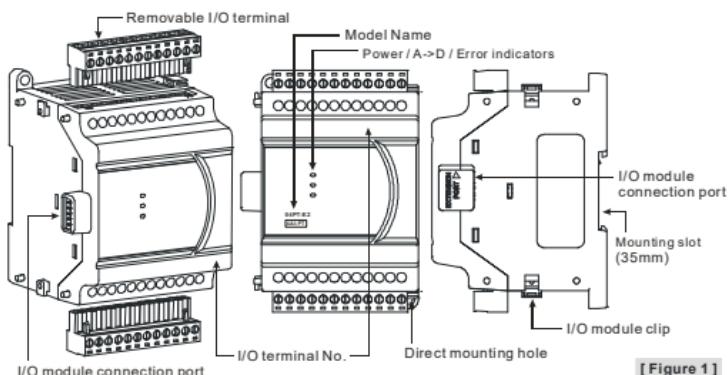


[Figure 1]

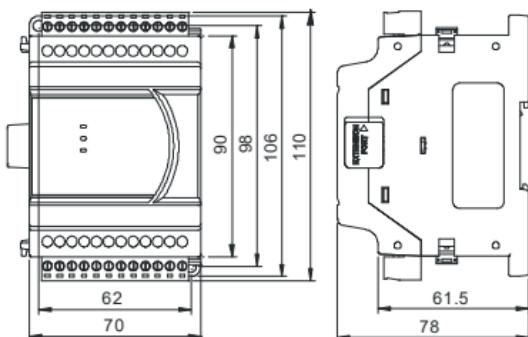

[Figure 2]

Unit: mm

■ External Wiring

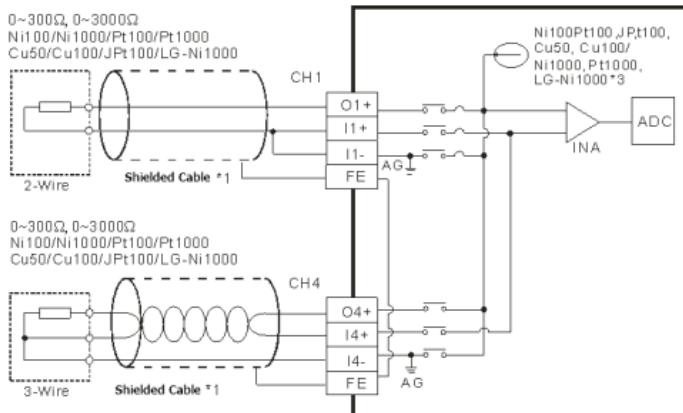

*1: Wiring for analog input should adopt cables of Ni100/Ni1000, Pt100/Pt1000, Cu50/Cu100, JPt100, LG-Ni100 or other temperature sensor cables or double shielded cable and should be separated from other power cables that may cause interference. Please apply 3-wire for PT100 / PT1000. If a 2-wire sensor is applied, please short-circuit In+ and In- terminals (n=1~6).

*2: When resistance is 0 to 300Ω/ 0 to 3000Ω , we suggest using 2-wire or 3-wire sensor and not 4-wire.

*3: Choosing the Appropriate Sensor

- DVP06PT-E2: If using Ni100, Pt100, JPt100, Cu50 or Cu100 temperature sensor and 300Ω resistor, the internal excitation current is 1.0389 mA; if using Ni1000, Pt1000 or LG-Ni1000 temperature sensor and 3000Ω resistor, the internal excitation current is 208.3μA.
- DVP04PT-E2: If using Ni100, Pt100 and 300Ω resistance sensor, the internal excitation current is 1.53mA; if using Ni1000, Pt1000 and 3000Ω resistance sensor the internal excitation current is 200μA.

*4. Connect FE with terminal for noise suppression.

Note 1: The 3-wire has an even length. A wire length is less than 200m and a wire resistance is less than 20Ω.

Note 2: Please refer to functions specifications regarding supported sensor types for different types of products.

■ I/O Terminal Layout

1	2	3	4	5	6	7	8	9	10	11	12
O1+	I1+	I1-	FE	O2+	I2+	I2-	FE	O3+	I3+	I3-	FE
DVP04PT-E2 (4AI)											
24V	0V	±	FE	O4+	I4+	I4-	FE				
1	2	3	4	5	6	7	8	9	10	11	12
1	2	3	4	5	6	7	8	9	10	11	12
O1+	I1+	I1-	O2+	I2+	I2-	O3+	I3+	I3-	O4+	I4+	I4-
DVP06PT-E2 (6AI)											
24V	0V	±	FE	FE	FE	O5+	I5+	I5-	O6+	I6+	I6-
1	2	3	4	5	6	7	8	9	10	11	12

■ Electrical Specifications

DVP04/06PT-E2											
Power supply voltage	24VDC (20.4VDC ~ 28.8VDC) (-15% ~ +20%)										
Max. rated power consumption	1.5W, supplied by external power source										
Connector	European standard removable terminal block (Pin pitch: 5mm)										

DVP04/06PT-E2					
Operation/storage	Operation: 0°C~55°C (temp.), 5~95% (humidity), Pollution degree2 Storage: -25°C~70°C (temp.), 5~95% (humidity)				
Vibration/shock immunity	International standards: IEC61131-2, IEC 68-2-6 (TEST Fc)/IEC61131-2 & IEC 68-2-27 (TEST Ea)				
Series connection to DVP-PLC MPU	The modules are numbered from 0 to 7 automatically by their distance from MPU. No.0 is the closest to MPU and No.7 is the furthest. Maximum 8 modules are allowed to connect to MPU and will not occupy any digital I/O points.				

■ Functions Specifications

DVP04/06PT-E2	Celsius (°C)	Fahrenheit (°F)	Input Impedance
Analog input channel	4/6 channels		
Digital data format	2's complement of 16 bits		
Response time	200ms / each channel		
Overall accuracy	±0.3% when in full scale (25°C, 77°F) ±0.6% when in full scale within the range of 0 ~ 55°C, 32 ~ 131°F		
Applicable sensor type	04PT : 3-Wire Pt100 (DIN 43760-1980 JIS C1604-1989, 100Ω 3850 PPM/°C); Pt1000 (DIN EN60751, 1 kΩ 3850 PPM/°C); Ni100 / Ni1000(DIN 43760); 0 ~ 300Ω/0 ~ 3000Ω input impedance 06PT : 3- Wire Pt100 (DIN 43760-1980 JIS C1604-1989, 100Ω 3850 PPM/°C); Pt1000 (DIN EN60751, 1 kΩ 3850 PPM/°C) ; Ni100 / Ni1000(DIN 43760) ; Cu50 : Cu100 : JPt100 (JIS C1604-1989) : LG-Ni1000 : 0 ~ 300Ω/0 ~ 3000Ω input impedance		
Input temperature range	Pt100: -180°C ~ 800°C Ni100: -80°C ~ 170°C Pt1000: -180°C ~ 800°C Ni1000: -80°C ~ 170°C JPt100: -180°C ~ 500°C Cu50: -50°C ~ 150°C Cu100: -50°C ~ 150°C LG-Ni1000: -50°C ~ 180°C	Pt100: -180°C ~ 800°C Ni100: -80°C ~ 170°C Pt1000: -180°C ~ 800°C Ni1000: -80°C ~ 170°C JPt100: -180°C ~ 500°C Cu50: -50°C ~ 150°C Cu100: -50°C ~ 150°C LG-Ni1000: -50°C ~ 180°C	0 ~ 300Ω 0 ~ 3000Ω
Range of digital conversion	Pt100: K-1,800 ~ K8,000 Ni100: K-800 ~ K1,700 Pt1000: K-1,800 ~ K8,000 Ni1000: K-800 ~ K1,700 JPt100: K-1,800 ~ K5,000 Cu50: K-500 ~ K1,500 Cu100: K-500 ~ K1,500 LG-Ni1000: K-500 ~ K1,800	Pt100: K-1,800 ~ K8,000 Ni100: K-800 ~ K1,700 Pt1000: K-1,800 ~ K8,000 Ni1000: K-800 ~ K1,700 JPt100: K-1,800 ~ K5,000 Cu50: K-500 ~ K1,500 Cu100: K-500 ~ K1,500 LG-Ni1000: K-500 ~ K1,800	K0 ~ K3,000 K0 ~ K30,000
Resolution	0.1°C	0.18°F ¹	0.1Ω
Average function	Range: K1 ~ K100.		
Self-diagnosis	Upper and lower bound detection in all channels		
Isolation	Optical coupler isolation between digital circuits and analog circuits. No isolation among analog channels. 500VDC between digital circuits and Ground 500VDC between analog circuits and Ground 500VDC between analog circuits and digital circuits 500VDC between 24VDC and Ground		

*1: The unit of temperature would be displayed as 0.1°C/0.1°F. If the temperature unit is set to be Fahrenheit, the second decimal place would not be shown.

■ Control Register

04P	06P	Attrib.	Register content	Description
#0	#0	O	R	Model name DVP04PT-E2 model code = H'0082 DVP06PT-E2 model code = H'00C2
#1	#1	O	R	Firmware version Display the current firmware version in hex.

04P	06P	Attrib.	Register content	Description
#2	#2	O R/W	CH1 Input mode setting	Input mode: Default = H'0000. Take CH1 for example: Mode 0 (H'0000): Pt100: -180°C ~ 800°C Mode 1 (H'0001): Ni100: -80°C ~ 170°C Mode 2 (H'0002): Pt1000: -180°C ~ 800°C Mode 3 (H'0003): Ni1000: -80°C ~ 170°C Mode 4 (H'0004): 0~300Ω Mode 5 (H'0005): 0~3000Ω Mode 6 (H'0006): JPt100 (-180°C ~ 500°C) Mode 7 (H'0007): Cu50 (-50°C ~ 150°C) Mode 8 (H'0008): Cu100 (-50°C ~ 150°C) Mode 9 (H'0009): LG-Ni1000 (-50°C ~ 180°C) Mode -1 (H'FFFF): Channel 1 unavailable Note: 04PT-E2 do NOT support mode 6-9.
#3	#3	O R/W	CH2 Input mode setting	
#4	#4	O R/W	CH3 Input mode setting	
#5	#5	O R/W	CH4 Input mode setting	
	#6	O R/W	CH5 Input mode setting	
	#7	O R/W	CH6 Input mode setting	
#7		O R/W	Temperature unit setting	Select the temperature unit (Celsius °C / Fahrenheit °F). Default = H'0(°C)
#8	#8	O R/W	CH1 sampling range	
#9	#9	O R/W	CH2 sampling range	
#10	#10	O R/W	CH3 sampling range	Set sampling range: Range = K1 ~ K100
#11	#11	O R/W	CH4 sampling range	Default = K10
	#12	O R/W	CH5 sampling range	
	#13	O R/W	CH6 sampling range	
#12	#14	X R	Average temperature measured at CH1	
#13	#15	X R	Average temperature measured at CH2	Average temperature measured.
#14	#16	X R	Average temperature measured at CH3	Setting Temperature Unit :
#15	#17	X R	Average temperature measured at CH4	<ul style="list-style-type: none"> ● DVP04PT-E2 : CR#7 ● DVP06PT-E2 : CR#27
	#18	X R	Average temperature measured at CH5	
	#19	X R	Average temperature measured at CH6	
#20	#20	X R	Present temperature measured at CH1	
#21	#21	X R	Present temperature measured at CH2	Present temperature measured.
#22	#22	X R	Present temperature measured at CH3	Setting Temperature Unit :
#23	#23	X R	Present temperature measured at CH4	<ul style="list-style-type: none"> ● DVP04PT-E2 : CR#7 ● DVP06PT-E2 : CR#27
	#24	X R	Present temperature measured at CH5	
	#25	X R	Present temperature measured at CH6	
	#26	O R/W	Mode 4 (H'0004): 0~300Ω. Temperature display decimal digit changes	In mode 4 (0~300Ω), temperature display decimal changes (0: 1 digit after the decimal place/ 1: 2 digits after the decimal place). Default= H0
	#27	O R/W	Temperature unit setting	Select the temperature unit (Celsius °C / Fahrenheit °F). Default = H'0(°C)
#28	#28	O R/W	Adjusted offset value of CH1	Adjusted offset value measured, range K-1000 ~ K1000. Default = K0
#29	#29	O R/W	Adjusted offset value of CH2	
#30	#30	O R/W	Adjusted offset value of CH3	Measured Value = Original Value – Adjusted offset value
#31	#31	O R/W	Adjusted offset value of CH4	Unit Setup:
	#32	O R/W	Adjusted offset value of CH5	<ul style="list-style-type: none"> ● DVP04PT-E2 : CR#7 ● DVP06PT-E2 : CR#27
	#33	O R/W	Adjusted offset value of CH6	
#40	#40	O R/W	Function: Set value changing prohibited	Prohibit set value changing, b0~b5 corresponds to CH1 ~ CH6. Default =H'0000
#41	#41	X R/W	Function: Save all the set values	Save all the set values. Default =H'0000
#43	#43	X R	Error status	Register for storing all error status. See the table of error status for more information.

04P	06P	Attrib.		Register content		Description							
#100	#100	O	R/W	Function: Enable/Disable limit detection		Upper and lower bound detection, b0~b5 corresponds to CH1 ~ CH6 (0: Disable/ 1: Enable). Default= H'0000.							
#101	#101	X	R/W	Upper and lower bound status		Display the upper and lower bound status (0: Not Exceeding; 1: Exceeding upper and lower bound value), b0~b5 corresponds to CH1 ~ CH6 lower bound, b8~b13 corresponds to CH1 ~ CH6 upper bound. Default =H'0000							
#102	#102	O	R/W	Set value of CH1 upper bound		Set upper bound value. Default = K32000.							
#103	#103	O	R/W	Set value of CH2 upper bound									
#104	#104	O	R/W	Set value of CH3 upper bound									
#105	#105	O	R/W	Set value of CH4 upper bound									
#106	O	R/W	Set value of CH5 upper bound										
#107	O	R/W	Set value of CH6 upper bound										
#108	#108	O	R/W	Set value of CH1 lower bound		Set lower bound value. Default = K-32000.							
#109	#109	O	R/W	Set value of CH2 lower bound									
#110	#110	O	R/W	Set value of CH3 lower bound									
#111	#111	O	R/W	Set value of CH4 lower bound									
#112	O	R/W	Set value of CH5 lower bound										
#113	O	R/W	Set value of CH6 lower bound										

Symbols: O: When CR#41 is set to H'5678, the set value of CR will be saved;

X: set value will not be saved

R: able to read data by using FROM instruction

W: able to write data by using TO instruction.

Module Reset: Write H'4352 into CR#0; the action can re-initialize all parameter settings to ensure normal function. Connect only 1 device (preferred) for module reset and then wait 1 sec. to execute power outage.

* CR#43: Error status value. See the table below:

Description							
bit0	K1 (H'1)		Power supply error		bit7	K128 (H'80)	
bit1	K2 (H'2)		Reserved		bit8	K256(H'0100)	
bit2	K4 (H'4)		Upper / lower bound error		bit9	K512(H'0200)	
bit3	K8 (H'8)		CH1 Conversion error		bit10	K1024(H'0400)	
bit4	K16 (H'10)		CH2 Conversion error		bit11	K2048(H'0800)	
bit5	K32 (H'20)		CH3 Conversion error		bit12	K4096(H'1000)	
bit6	K64 (H'40)		CH4 Conversion error		bit13	K8192(H'2000)	

Note: Each error status is determined by the corresponding bit (b0 ~ b15) and there may be more than 2 errors occurring at the same time. 0 = normal; 1 = error

• PID Control Registers

Note 1: CH5 and CH6 in DVP06PT-E2 do not support PID control.

CR#				Attrib.		Register content		Description	
CH1	CH2	CH3	CH4						
#120	#140	#160	#180	O	R/W	Set temperature value		Please set the temperature value according to proper range of each sensor type. Default = K0	

CR#				Attrib.		Register content		Description	
#121	#141	#161	#181	O	R/W	Sampling time (s)		Range: K1 ~ K30 (s). Default = K2	
#122	#142	#162	#182	O	R/W	K _P		Proportional control constant. Default = K121	
#123	#143	#163	#183	O	R/W	K _I		Integral constant. Default = K2,098	
#124	#144	#164	#184	O	R/W	K _D		Derivative constant. Default = K-29	
#125	#145	#165	#185	O	R/W	Upper limit of I value		Upper limit of I value. Default = K0	
#126	#146	#166	#186	O	R/W	Lower limit of I value		Lower limit of I value. Default = K0	
#127	#147	#167	#187	X	R	I value		Current accumulated offset value	
#128	#148	#168	#188	O	R/W	Heating/cooling		0: Heater, 1: Cooler. Default = K0	
#129	#149	#169	#189	O	R/W	Upper limit of output		Upper limit of output. Default = K32,000	
#130	#150	#170	#190	O	R/W	Lower limit of output		Lower limit of output. Default = K0	
#131	#151	#171	#191	X	R	Output percentage		Output percentage (Unit: 0.1%)	
#132	#152	#172	#192	X	R	Output width (ms)		Width of control output. Unit: ms	
#133	#153	#173	#193	X	R	Output cycle (ms)		Cycle of control output. Unit: ms	
#134	#154	#174	#194	X	R	Output volume		Output volume	
#135	#155	#175	#195	X	R/W	PID_RUN/STOP		0: STOP, 1: RUN. Default = K0	
#136	#156	#176	#196	X	R/W	Auto-tuning		0: Disabled, 1: Auto-tuning. Default = K0	

■ Explanation on Special Registers D9900~D9999

When DVP-ES2 MPU is connected with modules, registers D9900~D9999 will be reserved for storing values from modules. You can apply MOV instruction to operate values in D9900~D9999.

When DVP-ES2 MPU is connected with DVP04/06PT-E2, the configuration of special registers is as below:

Module #0	Module #1	Module #2	Module #3	Module #4	Module #5	Module #6	Module #7	Description
D1320	D1321	D1322	D1323	D1324	D1325	D1326	D1327	Model Code
D9900	D9910	D9920	D9930	D9940	D9950	D9960	D9970	CH1 average temperature
D9901	D9911	D9921	D9931	D9941	D9951	D9961	D9971	CH2 average temperature
D9902	D9912	D9922	D9932	D9942	D9952	D9962	D9972	CH3 average temperature
D9903	D9913	D9923	D9933	D9943	D9953	D9963	D9973	CH4 average temperature
D9904	D9914	D9924	D9934	D9944	D9954	D9964	D9974	CH5 average temperature
D9905	D9915	D9925	D9935	D9945	D9955	D9965	D9975	CH6 average temperature

Note 1: D9900 ~ D9999 are average input values of CH1 ~ CH4 and the sampling range is K1 ~ K100.

When the sampling range is set to K1, the values displayed in D9900~D9999 are current values.

You can use: 1. ES_AIO Configuration Function of WPLSoft or 2. FROM/TO instructions (CR#8 ~ CR#11) to set the sampling range as K1.

■ Adjust PT Conversion Curve

Users can adjust the conversion curves according to the actual needs by changing the Offset value.


Offset in DVP04/06PT-E2: Deviation digital value from the target value.

(Measured Value= Original Value – Adjust Value Offset)


- Mode0 ~ Mode3, Mode6 ~ Mode9 : 0.1°

- Mode4 ~ Mode5: 0.1Ω


- Mode 0 :

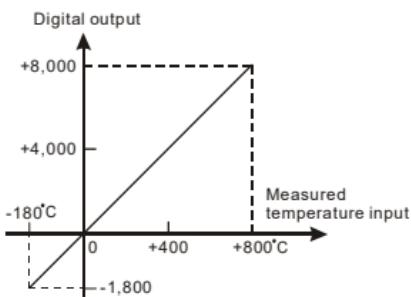


- Mode 3 :

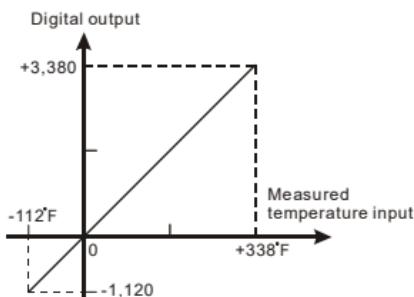


- Mode 1:

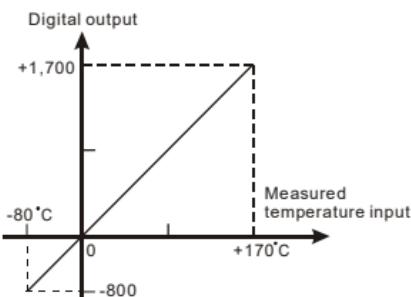


- Mode 4:

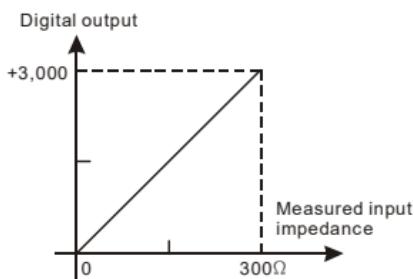

- Mode 2:

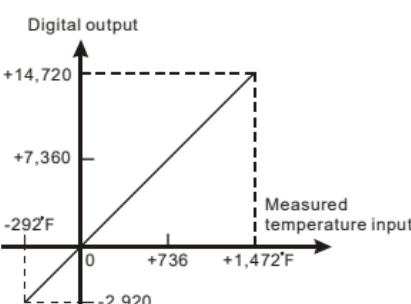


- Mode 5:

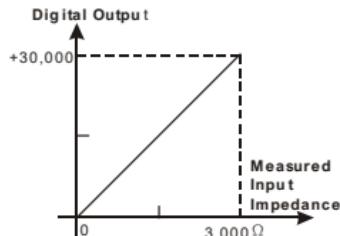

感謝您採用台達 DVP 系列產品。DVP04/06PT-E2 溫度量測模組接受外部 4/6 點熱電阻溫度感測器，將其轉換成 16 位元的數位信號。使用者可選擇攝氏溫度(°C)或華氏(°F)溫度，攝氏溫度輸入解析度為 0.1°C，華氏溫度輸入解析度為 0.18°F。並可透過主機以 FROM / TO 指令來讀寫模組內資料，或者以 MOV 指令直接讀取對應通道平均值(請參閱 D9900 ~ D9999 特殊暫存器使用說明)。


- ✓ 本安裝說明書提供給使用者電氣規格、功能規格、安裝配線之相關注意事項。其他詳細之程式設計及指令說明請見 **DVP-ES2 操作手冊【程式篇】**，選購之周邊裝置詳細說明請見該產品隨機安裝說明書。
- ✓ 本機為開放型 (OPEN TYPE) 機殼，因此使用者使用本機時，必須將之安裝於具防塵、防潮及免於電擊衝擊意外之外殼配線箱內。另必須具備保護措施（如：特殊之工具或鑰匙才可打開）防止非維護人員操作或意外衝擊本體，造成危險及損壞。
- ✓ 交流輸入電源不可連接於輸入/出信號端，否則可能造成嚴重損壞，請在上電之前再次確認電源配線。請勿在上電時觸摸任何端子。本體上之接地端子 ④ 務必正確的接地，可提高產品抗雜訊能力。

■ 產品外觀尺寸與部位介紹

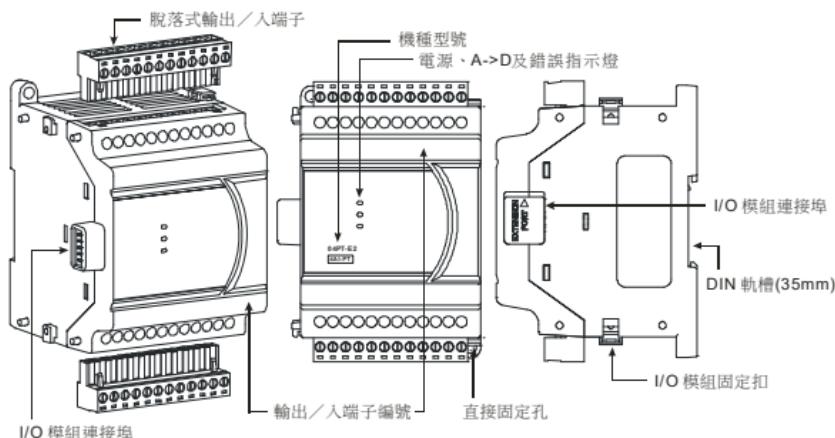

- 詳細尺寸圖請參閱英文版之 Figure2，單位：mm。

■ 外部配線

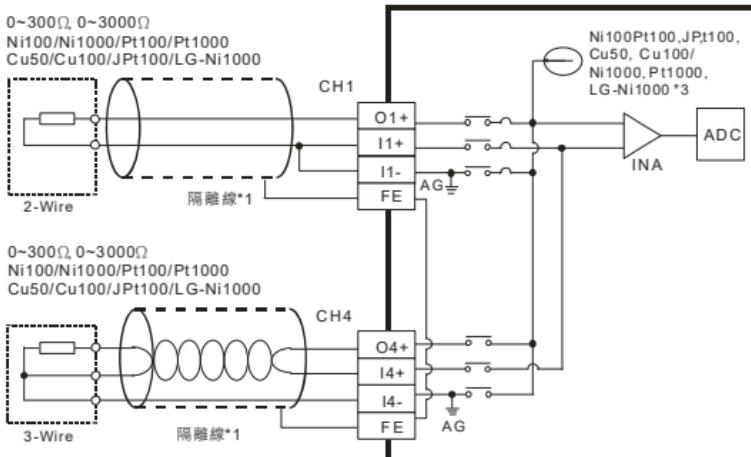

*1: 使用於類比輸入的配線應採用 Ni100/Ni1000、Pt100/Pt1000、Cu50/Cu100、JPt100、LG-NI1000 或其它本文定義的溫度感測器之連接線或雙絞隔離線且應與其他電源線或可能引起雜訊之接線分開。請使用 3 線式溫度感測器，若欲使用 2 線式溫度感測器時，請將 In+，In-短接 (n=1~6)。

*2：量測電阻 0~300Ω/0~3000Ω 時，建議使用 2 線式或是 3 線式即可，不需使用到 4 線式感測器。

*3：選擇適當感測器

● DVP06PT-E2：若使用 Ni100、Pt100、JPt100、Cu50 與 Cu100 溫度感測器以及 0~300Ω 電阻感測器，內部激勵電流為 1.0389mA；若使用 Ni1000、Pt1000 與 LG-Ni1000 溫度感測器以及 0~3000Ω 電阻感測器，內部激勵電流為 208.3μA。

● DVP04PT-E2：若使用 Ni100、Pt100 以及 0~300Ω 電阻感測器，內部激勵電流為 1.53mA；若使用 Ni1000、Pt1000 以及 0~3000Ω 電阻感測器，內部激勵電流為 200μA。

*4：如果雜訊過大請將 FE 與接地端子連接

注意 1：三線式線材長度需等長，單一線長 < 200m 且單一線阻 < 20ohm。

注意 2：各機種所支援的感測器型式請以功能規格為主。

■ 輸入/輸出端子台配置

請參閱英文版之端子配置圖，在此語言版本省略說明。

■ 電氣規格

DVP04/06PT-E2	
電源電壓	24VDC (20.4VDC ~ 28.8VDC) (-15% ~ +20%)
額定最大消耗功率	1.5W，由外部電源供應。
連接方式	脫落式歐式端子座 (端點距離：5mm)
操作 / 儲存環境	操作：0°C ~ 55°C (溫度)，5 ~ 95% (濕度) 污染等級 2 儲存：-25°C ~ 70°C (溫度)，5 ~ 95% (濕度)
耐振動 / 衝擊	國際標準規範 IEC61131-2，IEC 68-2-6 (TEST Fc) / IEC61131-2 & IEC 68-2-27 (TEST Ea)
與 DVP-PLC 主機串接說明	模組編號以靠近主機之順序自動編號由 0 到 7，最大可連接 8 台且不佔用數位 I/O 點數。

■ 功能規格

DVP04/06PT-E2	攝氏(°C)	華氏(°F)	電阻
類比訊號輸入通道	4/6 通道		
數位資料格式	16 位元二補數		
響應時間	200ms / 每個通道		
總和精密度	±0.3% 在 (25°C, 77°F) 範圍內滿刻度時 ±0.6% 在 (0 ~ 55°C, 32 ~ 131°F) 範圍內滿刻度時		
適合感測器形式	04PT : 3-線 Pt100 (DIN 43760-1980 JIS C1604-1989, 100Ω 3850 PPM/°C) : Pt1000 (DIN EN60751, 1 kΩ 3850 PPM/C) : Ni100 / Ni1000(DIN 43760) : 0 ~ 300Ω/0 ~ 3000Ω 阻抗輸入 06PT : 3-線 Pt100 (DIN 43760-1980 JIS C1604-1989, 100Ω 3850 PPM/°C) : Pt1000 (DIN EN60751, 1 kΩ 3850 PPM/C) : Ni100 / Ni1000(DIN 43760) : Cu50 : Cu100 : JPt100 (JIS C1604-1989) : LG-Ni1000 : 0 ~ 300Ω/0 ~ 3000Ω 阻抗輸入		
輸入溫度範圍	Pt100: -180°C ~ 800°C Ni100: -80°C ~ 170°C Pt1000: -180°C ~ 800°C Ni1000: -80°C ~ 170°C JPt100: -180°C ~ 500°C Cu50: -50°C ~ 150°C Cu100: -50°C ~ 150°C LG-Ni1000: -50°C ~ 180°C	Pt100: -292°F ~ 1,472°F Ni100: -112°F ~ 338°F Pt1000: -292°F ~ 1,472°F Ni1000: -112°F ~ 338°F JPt100: -292°F ~ 932°F Cu50: -58°F ~ 302°F Cu100: -58°F ~ 302°F LG-Ni1000: -58°F ~ 356°F	0 ~ 300Ω 0 ~ 3000Ω

DVP04/06PT-E2	攝氏(°C)	華氏(°F)	電阻
數位轉換範圍	Pt100: K-1,800 ~ K8,000 Ni100: K-800 ~ K1,700 Pt1000: K-1,800 ~ K8,000 Ni1000: K-800 ~ K1,700 JPt100: K-1,800 ~ K5,000 Cu50: K-500 ~ K1,500 Cu100: K-500 ~ K1,500 LG-Ni1000: K-500 ~ K1,800	Pt100: K-2,920 ~ K14,720 Ni100: K-1,120 ~ K3,380 Pt1000: K-2,920 ~ K14,720 Ni1000: K-1,120 ~ K3,380 JPt100: K-2,920 ~ K9,320 Cu50: K-580 ~ K3,020 Cu100: K-580 ~ K3,020 LG-Ni1000: K-580 ~ K3,560	K0 ~ K3,000 K0 ~ K30,000
解析度	0.1°C	0.18°F ¹	0.1Ω
平均功能	設定範圍 : K1 ~ K100		
自我診斷功能	上下極限偵測 / 通道		
隔離方式	類比電路與數位電路之間，透過光耦隔離，類比通道間未隔離 數位電路與接地之間 : 500VDC 類比電路與接地之間 : 500VDC 類比電路與數位電路之間 : 500VDC 24VDC 與接地之間 : 500VDC		

*1. 溫度顯示單位為 0.1°C/0.1°F，若溫度單位選擇華氏，小數點第二位將不被顯示

■ 控制暫存器 CR

04PT	06PT	屬性	暫存器名稱	說明
#0	#0	O R	機種型號	DVP04PT-E2 機種代碼 = H'0082 DVP06PT-E2 機種代碼 = H'00C2
#1	#1	O R	韌體版本	16 進制，顯示目前韌體版本
#2	#2	O R/W	CH1 輸入模式設定	輸入模式設定：出廠設定值 H'0000。以 CH1 來說明 模式 0 (H'0000) : Pt100 (-180°C ~ 800°C) 模式 1 (H'0001) : Ni100 (-80°C ~ 170°C) 模式 2 (H'0002) : Pt1000 (-180°C ~ 800°C) 模式 3 (H'0003) : Ni1000 (-80°C ~ 170°C) 模式 4 (H'0004) : 0 ~ 300Ω 模式 5 (H'0005) : 0 ~ 3000Ω 模式 6 (H'0006) : JPt100 (-180°C ~ 500°C) 模式 7 (H'0007) : Cu50 (-50°C ~ 150°C) 模式 8 (H'0008) : Cu100 (-50°C ~ 150°C) 模式 9 (H'0009) : LG-Ni1000 (-50°C ~ 180°C) 模式-1 (H'FFFF) : 關閉 CH1 不使用 註：04PT-E2 尚不支援模式 6~模式 9
#3	#3	O R/W	CH2 輸入模式設定	
#4	#4	O R/W	CH3 輸入模式設定	
#5	#5	O R/W	CH4 輸入模式設定	
	#6	O R/W	CH5 輸入模式設定	
	#7	O R/W	CH6 輸入模式設定	
#7		O R/W	溫度顯示單位切換	溫度顯示單位切換 (攝氏°C / 華氏°F)，出廠設定值 H'0(°C)
#8	#8	O R/W	CH1 平均次數	通道訊號的平均次數設定： 設定範圍 K1 ~ K100 出廠設定值 K10
#9	#9	O R/W	CH2 平均次數	
#10	#10	O R/W	CH3 平均次數	
#11	#11	O R/W	CH4 平均次數	
	#12	O R/W	CH5 平均次數	
	#13	O R/W	CH6 平均次數	
#12	#14	X R	CH1 量測溫度平均值	量測溫度平均值。 單位設定： ● DVP04PT-E2 : CR#7 設定 ● DVP06PT-E2 : CR#27 設定
#13	#15	X R	CH2 量測溫度平均值	
#14	#16	X R	CH3 量測溫度平均值	
#15	#17	X R	CH4 量測溫度平均值	
	#18	X R	CH5 量測溫度平均值	

04PT	06PT	屬性		暫存器名稱	說明
	#19	X	R	CH6 量測溫度平均值	量測溫度現在值顯示。 單位設定： <ul style="list-style-type: none"> ● DVP04PT-E2 : CR#7 設定 ● DVP06PT-E2 : CR#27 設定
#20	#20	X	R	CH1 量測溫度現在值	
#21	#21	X	R	CH2 量測溫度現在值	
#22	#22	X	R	CH3 量測溫度現在值	
#23	#23	X	R	CH4 量測溫度現在值	
	#24	X	R	CH5 量測溫度現在值	
	#25	X	R	CH6 量測溫度現在值	
	#26	O	R/W	模式 4:0 ~ 300Ω 溫度顯示位數切換	在模式 4:0 ~ 300Ω 時，溫度顯示位數切換 (0 : 小數點後一位 / 1 : 小數點後二位)，出廠設定值 H0
	#27	O	R/W	溫度顯示單位切換	溫度顯示單位切換 (攝氏°C / 華氏°F)，出廠設定值 H'0(°C)
#28	#28	O	R/W	CH1 微調 Offset 值	量測訊號的微調偏移量設定，範圍為 K-1000 ~ K1000，出廠設定值 K0 量測數值 = 原始數值 - 微調 Offset 值 單位設定： <ul style="list-style-type: none"> ● DVP04PT-E2 : CR#7 設定 ● DVP06PT-E2 : CR#27 設定
#29	#29	O	R/W	CH2 微調 Offset 值	
#30	#30	O	R/W	CH3 微調 Offset 值	
#31	#31	O	R/W	CH4 微調 Offset 值	
	#32	O	R/W	CH5 微調 Offset 值	
	#33	O	R/W	CH6 微調 Offset 值	
#40	#40	O	R/W	禁止設定值變更	禁止設定值變更，b0~b5 對應 CH1~CH6 出廠設定值 H'0000
#41	#41	X	R/W	儲存所有設定值	儲存保持參數的設定值，出廠設定值 H'0000
#43	#43	X	R	錯誤狀態	儲存所有錯誤狀態的資料暫存器，詳細內容請參照錯誤信息表
#100	#100	O	R/W	上下限偵測致能/禁能	上下限偵測功能，b0~b5 對應 CH1~CH6 (0 : Disable / 1 : Enable)，出廠設定值 H'0000
#101	#101	X	R/W	上下限值狀態	上下限值狀態顯示(0 : 無超出上/下限值，1 : 超出上/下限值)，b0~b5 對應 CH1~CH6 之下限偵測結果，b8~b13 對應 CH1~CH6 之上限偵測結果，出廠設定值 H'0000
#102	#102	O	R/W	CH1 上限設定值	上限值設定，出廠設定值 K32000
#103	#103	O	R/W	CH2 上限設定值	
#104	#104	O	R/W	CH3 上限設定值	
#105	#105	O	R/W	CH4 上限設定值	
	#106	O	R/W	CH5 上限設定值	
	#107	O	R/W	CH6 上限設定值	
#108	#108	O	R/W	CH1 下限設定值	下限值設定，出廠設定值 K-32000
#109	#109	O	R/W	CH2 下限設定值	
#110	#110	O	R/W	CH3 下限設定值	
#111	#111	O	R/W	CH4 下限設定值	
	#112	O	R/W	CH5 下限設定值	
	#113	O	R/W	CH6 下限設定值	

符號定義：O 表示為保持型，當 CR#41 設定為 H'5678 時會將資料保存；X 表示為非保持型。

R 表示為可使用 FROM 指令讀取資料；W 表示為可使用 TO 指令寫入資料。

模組重置：對 CR#0 寫入 H'4352；此重置動作將會重新初始化模組所有參數設定，為避免初始化過程影響其他模組的正常運作，建議每次只連接一台模組重置，並且於下達重置命令後等待 1 秒再斷電。

※ CR#43 錯誤狀態表：

說明							
bit0	K1 (H'1)	電源異常			bit7	K128(H'80)	CH5 轉換值異常
bit1	K2 (H'2)	系統保留			bit8	K256(H'0100)	CH6 轉換值異常
bit2	K4 (H'4)	轉換值超出所設定的上下限值			bit9	K512(H'0200)	模式設定錯誤
bit3	K8 (H'8)	CH1 轉換值異常			bit10	K1024(H'0400)	平均次數設定錯誤
bit4	K16 (H'10)	CH2 轉換值異常			bit11	K2048(H'0800)	上下限值設定錯誤
bit5	K32 (H'20)	CH3 轉換值異常			bit12	K4096(H'1000)	設定值禁止變更
bit6	K64 (H'40)	CH4 轉換值異常			bit13	K8192(H'2000)	下級模組斷線

※註：每個錯誤狀態由相對應之位元 b0 ~ b15 決定，有可能會同時產生兩個以上之錯誤狀態，0 代表正常無錯誤，1 代表有錯誤狀態產生。

• PID 控制暫存器範圍

註：DVP06PT-E2 的 CH5、CH6 不支援 PID 控制功能

CR#				屬性		暫存器名稱		說明	
CH1	CH2	CH3	CH4						
#120	#140	#160	#180	O	R/W	溫度設定值		請依選用之溫度感測器量測範圍來設定。 出廠設定值 K0。	
#121	#141	#161	#181	O	R/W	取樣時間(s)		可設定範圍 K1 ~ K30 (s)。出廠設定值 K2。	
#122	#142	#162	#182	O	R/W	K _P		比例增益，出廠設定值 K121。	
#123	#143	#163	#183	O	R/W	K _I		積分增益，出廠設定值 K2,098。	
#124	#144	#164	#184	O	R/W	K _D		微分增益，出廠設定值 K-29。	
#125	#145	#165	#185	O	R/W	積分量上限		積分量上限，出廠設定值 K0。	
#126	#146	#166	#186	O	R/W	積分量下限		積分量下限，出廠設定值 K0。	
#127	#147	#167	#187	X	R	積分量		目前累積的偏差量。	
#128	#148	#168	#188	O	R/W	加熱/冷卻選擇		H'0：加熱器，H'1：冷卻器。出廠設定值 H'0000	
#129	#149	#169	#189	O	R/W	輸出量上限值		可設定範圍 K-32,760 ~ K32,760。出廠設定值 K32,000。	
#130	#150	#170	#190	O	R/W	輸出量下限值		可設定範圍 K-32,760 ~ K32,760。出廠設定值 K0。	
#131	#151	#171	#191	X	R	輸出比率		範圍 K0 ~ K1,000 (單位：0.1%)。	
#132	#152	#172	#192	X	R	輸出寬度(ms)		控制輸出寬度，單位：ms。	
#133	#153	#173	#193	X	R	輸出週期(ms)		控制輸出週期，單位：ms。	
#134	#154	#174	#194	X	R	輸出量		輸出量。	
#135	#155	#175	#195	X	R/W	PID_Run/Stop		H'0：Stop，H'1：Run。出廠設定值 K0。	
#136	#156	#176	#196	X	R/W	Auto-tuning		H'0：不動作，H'1：Auto-tuning。出廠設定值 K0。	

■ 特殊暫存器 D9900 ~ D9999 使用說明

DVP-ES2 主機連接特殊 I/O 模組時，暫存器 D9900 ~ D9999 將被佔用，使用者可利用 MOV 指令在程式中指定 D9900 ~ D9999 來運算。

DVP-ES2 主機連接 DVP04/06PT-E2 時，特殊暫存器的分配如下：

第 1 台	第 2 台	第 3 台	第 4 台	第 5 台	第 6 台	第 7 台	第 8 台	說明
D1320	D1321	D1322	D1323	D1324	D1325	D1326	D1327	連線特殊 I/O 模組機種代碼
D9900	D9910	D9920	D9930	D9940	D9950	D9960	D9970	CH1 量測溫度平均值

第1台	第2台	第3台	第4台	第5台	第6台	第7台	第8台	說明
D9901	D9911	D9921	D9931	D9941	D9951	D9961	D9971	CH2 量測溫度平均值
D9902	D9912	D9922	D9932	D9942	D9952	D9962	D9972	CH3 量測溫度平均值
D9903	D9913	D9923	D9933	D9943	D9953	D9963	D9973	CH4 量測溫度平均值
D9904	D9914	D9924	D9934	D9944	D9954	D9964	D9974	CH5 量測溫度平均值
D9905	D9915	D9925	D9935	D9945	D9955	D9965	D9975	CH6 量測溫度平均值

* 輸入信號平均值寄存器為讀出專用，請勿在程式中修改。若要利用 D9900 ~ D9999 讀取通道
輸入現在值，可利用 WPLSoft 或 FROM/TO 指令將平均次數 (CR#8 ~ CR#13) 設定為 1。

■ 調整 PT 轉換特性曲線


經由調整 Offset 值，使用者可依實際應用需要來調整轉換特性曲線。

Offset 定義：數位值偏移量。(量測數值 = 原始數值 - 微調 Offset 值)


- 模式 0 ~ 模式 3、模式 6 ~ 模式 9 : 0.1°
- 模式 4 ~ 模式 5 : 0.1Ω

詳細公式請參閱英文版之定義，在此語言版本省略說明。


- 模式 0 :

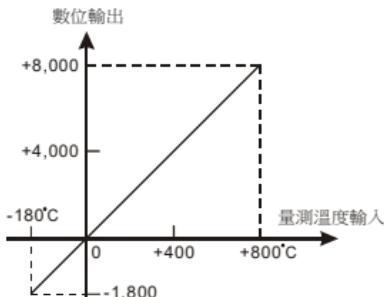


- 模式 3

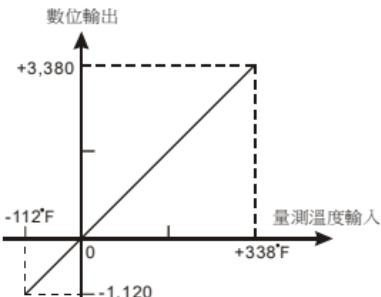


- 模式 1

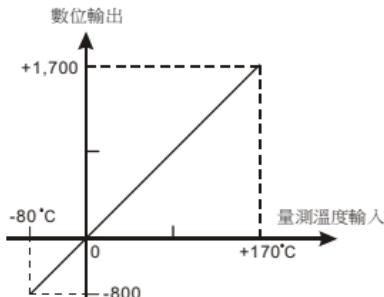


- 模式 4 :

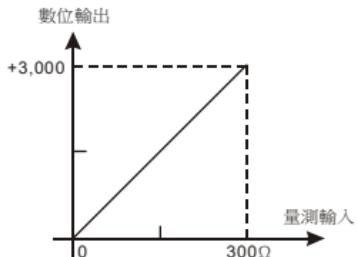

- 模式 2 :

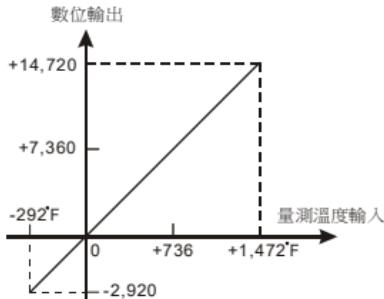


- 模式 5 :

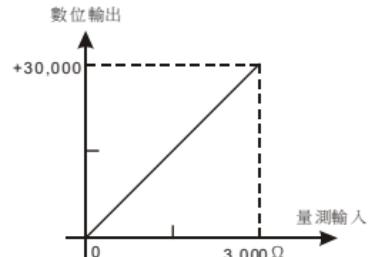

感谢您采用台达 DVP 系列产品。DVP04/06PT-E2 温度测量模块接受外部 4/6 点热电阻温度传感器，将其转换成 16 位的数字量信号。使用者可选择摄氏温度(°C)或华氏(°F)温度，摄氏温度输入分辨率为 0.1°C，华氏温度输入分辨率为 0.18°F。并可透过主机以 FROM / TO 指令来读写模块内数据，或者以 MOV 指令直接读取对应通道平均值(请参阅 D9900 ~ D9999 特殊寄存器使用说明)。


- ✓ 本安装说明书提供给使用者电气规格、功能规格、安装配线的相关注意事项。其它详细之程序设计及指令说明请见 DVP-ES2 操作手册【程序篇】，选购的周边装置详细说明请见该产品随机安装说明书。
- ✓ 本机为开放型 (OPEN TYPE) 机壳，因此使用者使用本机时，必须将其安装于具防尘、防潮及免于电击/冲击意外的外壳配线箱内。另必须具备保护措施 (如：特殊的工具或钥匙才可打开) 防止非维护人员操作或意外冲击本体，造成危险及损坏。
- ✓ 交流输入电源不可连接于输入/出信号端，否则可能造成严重损坏，请在上电之前再次确认电源配线。请勿在上电时触摸任何端子。本体上的接地端子 \oplus 务必正确的接地，可提高产品抗干扰能力。

■ 产品外观尺寸与部位介绍

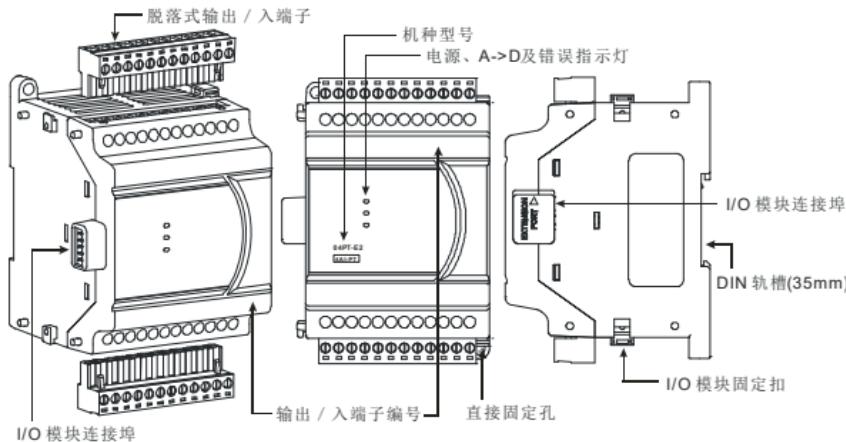

• 详细尺寸图请参阅英文版之 Figure2，单位：mm。

■ 外部配线

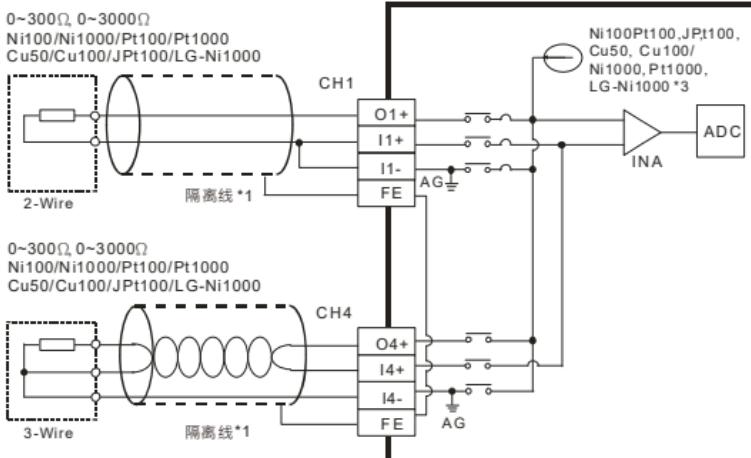

*1: 使用于模拟输入的配线应采用 Ni100/Ni1000/Pt100/Pt1000/Cu50/Cu100/JPt100/LG-Ni1000 或其它本文定义的温度传感器之连接线或双绞隔离线且应与其他电源线或可能引起噪声之接线分开。请使用 3 线式温度传感器，若欲使用 2 线式温度传感器时，请将 In+，In-短接(n=1~6)。

*2: 量测电阻 0~300Ω/0~3000Ω 时，建议使用 2 线式或是 3 线式即可，不需使用到 4 线式传感器。

*3: 选择适当传感器

- DVP06PT-E2: 若使用 Ni100、Pt100、JPt100、Cu50 与 Cu100 温度传感器以及 0~300Ω 电
阻传感器, 内部激励电流为 1.0389mA; 若使用 Ni1000、Pt1000 与 LG-Ni1000 温度传感器以
及 0~3000Ω 电阻传感器, 内部激励电流为 208.3μA。
- DVP04PT-E2: 若使用 Ni100、Pt100 以及 0~300Ω 电阻传感器, 内部激励电流为 1.53mA;
若使用 Ni1000、Pt1000 以及 0~3000Ω 电阻传感器, 内部激励电流为 200μA。

*4: 如果噪声过大请将 FE 与接地端子连接

注意 1: 三线式线材长度需等长, 单一线长<200m 且单一线阻<20ohm。

注意 2: 各机种所支持的传感器型式请以功能规格为主。

■ 输入 / 输出端子台配置

请参阅英文版的端子配置图, 在此语言版本省略说明。

■ 电气规格

DV04/06PT-E2	
电源电压	24VDC (20.4VDC ~ 28.8VDC) (-15% ~ +20%)
额定最大消耗功率	1.5W, 由外部电源供应。
连接方式	脱落式欧式端子座 (端点距离: 5mm)
操作 / 储存环境	操作: 0°C ~ 55°C (温度), 5 ~ 95% (湿度) 污染等级 2 储存: -25°C ~ 70°C (温度), 5 ~ 95% (湿度)
耐振动 / 冲击	国际标准规范 IEC61131-2, IEC 68-2-6 (TEST Fc) / IEC61131-2 & IEC 68-2-27 (TEST Ea)
与 DVP-PLC 主机串接说明	模块编号以靠近主机之顺序自动编号由 0 到 7, 最大可连接 8 台且不占用数字 I/O 量点数。

■ 功能规格

DV04/06PT-E2	摄氏(°C)	华氏(°F)	电阻
模拟讯号输入通道	4/6 通道		
数字量数据格式	16 位二补码		
响应时间	200ms / 每个通道		
总和精密度	±0.3% 在 (25°C, 77°F) 范围内满刻度时 ±0.6% 在 (0 ~ 55°C, 32 ~ 131°F) 范围内满刻度时		
适合感测器形式	04PT: 3-线 Pt100 (DIN 43760-1980 JIS C1604-1989, 100Ω 3850 PPM/°C); Pt1000 (DIN EN60751, 1 kΩ 3850 PPM/°C); Ni100 / Ni1000(DIN 43760); 0 ~ 300Ω/0 ~ 3000Ω 阻抗输入 06PT: 3-线 Pt100 (DIN 43760-1980 JIS C1604-1989, 100Ω 3850 PPM/°C); Pt1000 (DIN EN60751, 1 kΩ 3850 PPM/°C) ; Ni100 / Ni1000(DIN 43760); Cu50; Cu100; JPt100 (JIS C1604-1989); LG-Ni1000; 0 ~ 300Ω/0 ~ 3000Ω 阻抗输入		
输入温度范围	Pt100: -180°C ~ 800°C Ni100: -80°C ~ 170°C Pt1000: -180°C ~ 800°C Ni1000: -80°C ~ 170°C JPt100: -180°C ~ 500°C Cu50: -50°C ~ 150°C Cu100: -50°C ~ 150°C LG-Ni1000: -50°C ~ 180°C	Pt100: -292°F ~ 1,472°F Ni100: -112°F ~ 338°F Pt1000: -292°F ~ 1,472°F Ni1000: -112°F ~ 338°F JPt100: -292°F ~ 932°F Cu50: -58°F ~ 302°F Cu100: -58°F ~ 302°F LG-Ni1000: -58°F ~ 356°F	0 ~ 300Ω 0 ~ 3000Ω

DV04/06PT-E2	摄氏(°C)	华氏(°F)	电阻
数字转换范围	Pt100: K-1,800 ~ K8,000 Ni100: K-800 ~ K1,700 Pt1000: K-1,800 ~ K8,000 Ni1000: K-800 ~ K1,700 JPt100: K-1,800 ~ K5,000 Cu50: K-500 ~ K1,500 Cu100: K-500 ~ K1,500 LG-Ni1000: K-500 ~ K1,800	Pt100: K-2,920 ~ K14,720 Ni100: K-1,120 ~ K3,380 Pt1000: K-2,920 ~ K14,720 Ni1000: K-1,120 ~ K3,380 JPt100: K-2,920 ~ K9,320 Cu50: K-580 ~ K3,020 Cu100: K-580 ~ K3,020 LG-Ni1000: K-580 ~ K3,560	K0 ~ K3,000 K0 ~ K30,000
分辨率	0.1°C	0.18°F	0.1Ω
平均功能	设定范围: K1 ~ K100		
自我诊断功能	上下极限侦测 / 通道		
隔离方式	模拟量电路与数字量电路之间, 透过光耦隔离, 模拟量通道间未隔离 数字量电路与接地之间: 500VDC 模拟量电路与接地之间: 500VDC 模拟量电路与数字量电路之间: 500VDC 24VDC 与接地之间: 500VDC		

*1. 温度显示单位为 0.1°C/0.1°F, 若温度单位选择华氏, 小数点第二位将不被显示

■ 控制寄存器 CR

04PT	06PT	属性		寄存器名称	说明
#0	#0	O	R	机种型号	DVP04PT-E2 机种代码 = H'0082 DVP06PT-E2 机种代码 = H'00C2
#1	#1	O	R	韧体版本	16 进制, 显示目前韧体版本
#2	#2	O	R/W	CH1 输入模式设定	输入模式设定: 出厂设定值 H'0000。以 CH1 来说明 模式 0 (H'0000): Pt100 (-180°C ~ 800°C) 模式 1 (H'0001): Ni100 (-80°C ~ 170°C) 模式 2 (H'0002): Pt1000 (-180°C ~ 800°C) 模式 3 (H'0003): Ni1000 (-80°C ~ 170°C) 模式 4 (H'0004): 0 ~ 300Ω 模式 5 (H'0005): 0 ~ 3000Ω 模式 6 (H'0006): JPt100 (-180°C ~ 500°C) 模式 7 (H'0007): Cu50 (-50°C ~ 150°C) 模式 8 (H'0008): Cu100 (-50°C ~ 150°C) 模式 9 (H'0009): LG-Ni1000 (-50°C ~ 180°C) 模式-1 (H'FFFF): 关闭 CH1 不使用 注: 04PT-E2 尚不支持模式 6~模式 9
#3	#3	O	R/W	CH2 输入模式设定	
#4	#4	O	R/W	CH3 输入模式设定	
#5	#5	O	R/W	CH4 输入模式设定	
	#6	O	R/W	CH5 输入模式设定	
	#7	O	R/W	CH6 输入模式设定	
#7		O	R/W	温度显示单位切换	温度显示单位切换 (摄氏°C / 华氏°F), 出厂设定值 H'0(°C)
#8	#8	O	R/W	CH1 平均次数	通道讯号的平均次数设定: 设定范围 K1 ~ K100 出厂设定值 K10
#9	#9	O	R/W	CH2 平均次数	
#10	#10	O	R/W	CH3 平均次数	
#11	#11	O	R/W	CH4 平均次数	
	#12	O	R/W	CH5 平均次数	
	#13	O	R/W	CH6 平均次数	
#12	#14	X	R	CH1 量测温度平均值	
#13	#15	X	R	CH2 量测温度平均值	量测温度平均值。 单位设定: ● DVP04PT-E2: CR#7 设定 ● DVP06PT-E2: CR#27 设定
#14	#16	X	R	CH3 量测温度平均值	
#15	#17	X	R	CH4 量测温度平均值	
	#18	X	R	CH5 量测温度平均值	

04PT	06PT	属性		寄存器名称	说明
	#19	X	R	CH6 量测温度平均值	量测温度现在值显示。 单位设定： <ul style="list-style-type: none">● DVP04PT-E2: CR#7 设定● DVP06PT-E2: CR#27 设定
#20	#20	X	R	CH1 量测温度现在值	
#21	#21	X	R	CH2 量测温度现在值	
#22	#22	X	R	CH3 量测温度现在值	
#23	#23	X	R	CH4 量测温度现在值	
	#24	X	R	CH5 量测温度现在值	
	#25	X	R	CH6 量测温度现在值	
	#26	O	R/W	模式 4: 0 ~ 300Ω 温度显示位数切换	在模式 4: 0 ~ 300Ω 时, 温度显示位数切换 (0: 小数点后一位 / 1: 小数点后二位), 出厂设定值 H0
	#27	O	R/W	温度显示单位切换	温度显示单位切换 (摄氏°C / 华氏°F), 出厂设定值 H0(°C)
#28	#28	O	R/W	CH1 微调 Offset 值	量测讯号的微调偏移量设定, 范围为 K-1000 ~ K1000, 出厂设定值 K0 量测数值 = 原始数值 - 微调 Offset 值 单位设定： <ul style="list-style-type: none">● DVP04PT-E2: CR#7 设定● DVP06PT-E2: CR#27 设定
#29	#29	O	R/W	CH2 微调 Offset 值	
#30	#30	O	R/W	CH3 微调 Offset 值	
#31	#31	O	R/W	CH4 微调 Offset 值	
	#32	O	R/W	CH5 微调 Offset 值	
	#33	O	R/W	CH6 微调 Offset 值	
#40	#40	O	R/W	禁止设定值变更	禁止设定值变更, b0~b5 对应 CH1~CH6 出厂设定值 H'0000
#41	#41	X	R/W	储存所有设定值	储存保持参数的设定值, 出厂设定值 H'0000
#43	#43	X	R	错误状态	储存所有错误状态的数据寄存器, 详细内容请参照错误信息表
#100	#100	O	R/W	上下限侦测致能/禁能	上下限侦测功能, b0~b5 对应 CH1~CH6 (0: Disable / 1: Enable), 出厂设定值 H'0000
#101	#101	X	R/W	上下限值状态	上下限值状态显示(0: 无超出上/下限值, 1: 超出上/下限值), b0~b5 对应 CH1~CH6 之下限侦测结果, b8~b13 对应 CH1~CH6 之上限侦测结果, 出厂设定值 H'0000
#102	#102	O	R/W	CH1 上限设定值	上限值设定, 出厂设定值 K32000
#103	#103	O	R/W	CH2 上限设定值	
#104	#104	O	R/W	CH3 上限设定值	
#105	#105	O	R/W	CH4 上限设定值	
	#106	O	R/W	CH5 上限设定值	
	#107	O	R/W	CH6 上限设定值	
#108	#108	O	R/W	CH1 下限设定值	下限值设定, 出厂设定值 K-32000
#109	#109	O	R/W	CH2 下限设定值	
#110	#110	O	R/W	CH3 下限设定值	
#111	#111	O	R/W	CH4 下限设定值	
	#112	O	R/W	CH5 下限设定值	
	#113	O	R/W	CH6 下限设定值	

符号定义: O 表示为保持型, 当 CR#41 设定为 H'5678 时会将数据保存; X 表示为非保持型。

R 表示为可使用 FROM 指令读取数据; W 表示为可使用 TO 指令写入数据。

模块重置: 对 CR#0 写入 H'4352; 此重置动作将会重新初始化模块所有参数设定, 为避免初始化过程影响其他模块的正常运作, 建议每次只连接一台模块重置, 并且于下达重置命令后等待 1 秒再断电。

※ CR#43 错误状态表:

说明						
bit0	K1 (H'1)	电源异常		bit7	K128(H'80)	CH5 转换值异常
bit1	K2 (H'2)	系统保留		bit8	K256(H'0100)	CH6 转换值异常
bit2	K4 (H'4)	转换值超出所设定的上下限值		bit9	K512(H'0200)	模式设定错误
bit3	K8 (H'8)	CH1 转换值异常		bit10	K1024(H'0400)	平均次数设定错误
bit4	K16 (H'10)	CH2 转换值异常		bit11	K2048(H'0800)	上下限值设定错误
bit5	K32 (H'20)	CH3 转换值异常		bit12	K4096(H'1000)	设定值禁止变更
bit6	K64 (H'40)	CH4 转换值异常		bit13	K8192(H'2000)	下级模块断线

注: 每个错误状态由相对应之位 b0 ~ b15 决定, 有可能会同时产生两个以上之错误状态, 0 代表正常无错误, 1 代表有错误状态产生。

• PID 控制寄存器范围

注: DVP06PT-E2 的 CH5、CH6 不支持 PID 控制功能

CR#				属性		寄存器名称	说明
CH1	CH2	CH3	CH4				
#120	#140	#160	#180	O	R/W	温度设定值	请依选用之温度传感器测量范围来设定。 出厂设定值 K0。
#121	#141	#161	#181	O	R/W	取样时间(s)	可设定范围 K1 ~ K30 (s)。出厂设定值 K2。
#122	#142	#162	#182	O	R/W	K _P	比例增益, 出厂设定值 K121。
#123	#143	#163	#183	O	R/W	K _I	积分增益, 出厂设定值 K2,098。
#124	#144	#164	#184	O	R/W	K _D	微分增益, 出厂设定值 K-29。
#125	#145	#165	#185	O	R/W	积分量上限	积分量上限, 出厂设定值 K0。
#126	#146	#166	#186	O	R/W	积分量下限	积分量下限, 出厂设定值 K0。
#127	#147	#167	#187	X	R	积分量	目前累积的偏差量。
#128	#148	#168	#188	O	R/W	加热 / 冷却选择	H'0: 加热器, H'1: 冷却器。出厂设定值 H'0000
#129	#149	#169	#189	O	R/W	输出量上限值	可设定范围 K-32,760 ~ K32,760。出厂设定值 K32,000。
#130	#150	#170	#190	O	R/W	输出量下限值	可设定范围 K-32,760 ~ K32,760。出厂设定值 K0。
#131	#151	#171	#191	X	R	输出比率	范围 K0 ~ K1,000 (单位: 0.1%)。
#132	#152	#172	#192	X	R	输出宽度(ms)	控制输出宽度, 单位: ms。
#133	#153	#173	#193	X	R	输出周期(ms)	控制输出周期, 单位: ms。
#134	#154	#174	#194	X	R	输出量	输出量。
#135	#155	#175	#195	X	R/W	PID_Run/Stop	H'0: Stop, H'1: Run。出厂设定值 K0。
#136	#156	#176	#196	X	R/W	Auto-tuning	H'0: 不动作, H'1: Auto-tuning。出厂设定值 K0。

■ 特殊寄存器 D9900 ~ D9999 使用说明

DVP-ES2 主机连接特殊 I/O 模块时, 寄存器 D9900 ~ D9999 将被占用, 使用者可利用 MOV 指令在程序中指定 D9900 ~ D9999 来运算。

DVP-ES2 主机连接 DVP04/06PT-E2 时, 特殊寄存器的分配如下:

第 1 台	第 2 台	第 3 台	第 4 台	第 5 台	第 6 台	第 7 台	第 8 台	说明
D1320	D1321	D1322	D1323	D1324	D1325	D1326	D1327	联机特殊 I/O 模块机种代码
D9900	D9910	D9920	D9930	D9940	D9950	D9960	D9970	CH1 量测温度平均值

第1台	第2台	第3台	第4台	第5台	第6台	第7台	第8台	说明
D9901	D9911	D9921	D9931	D9941	D9951	D9961	D9971	CH2 量测温度平均值
D9902	D9912	D9922	D9932	D9942	D9952	D9962	D9972	CH3 量测温度平均值
D9903	D9913	D9923	D9933	D9943	D9953	D9963	D9973	CH4 量测温度平均值
D9904	D9914	D9924	D9934	D9944	D9954	D9964	D9974	CH5 量测温度平均值
D9905	D9915	D9925	D9935	D9945	D9955	D9965	D9975	CH6 量测温度平均值

* 输入信号平均值寄存器为读出专用, 请勿在程序中修改。若要利用 D9900 ~ D9999 读取通道
输入现在值, 可利用 WPLSoft 或 FROM/TO 指令将平均次数 (CR#8 ~ CR#13) 设定为 1。

■ 调整 PT 转换特性曲线

经由调整 Offset 值, 使用者可依实际应用需要来调整转换特性曲线。

Offset 定义: 数位值偏移量。(量测数值 = 原始数值 - 微调 Offset 值)



- 模式 0 ~ 模式 3、模式 6 ~ 模式 9: 0.1°

- 模式 4~ 模式 5: 0.1Ω

详细公式请参阅英文版之定义, 在此语言版本省略说明。



- 模式 0

- 模式 3

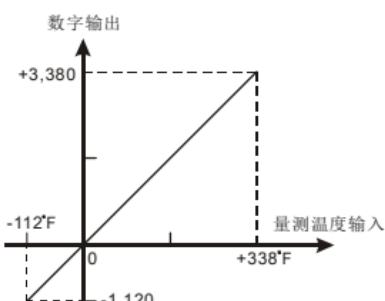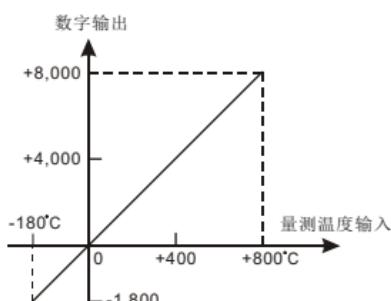

- 模式 1

- 模式 4

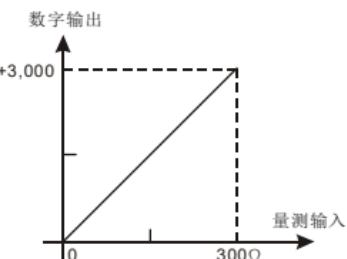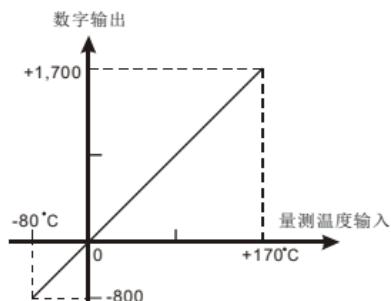

- 模式 2

- 模式 5

